

Connections


★ For 48 size, terminal numbering with be 11 & 12 instead of 17 & 18 repectively.

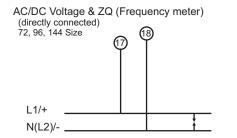

AC/DC Current (directly connected) 72, 96, 144 Size

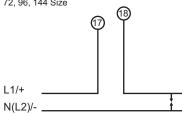


AC current (for use on current transformer)

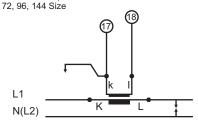


Dimensions

Weight approx

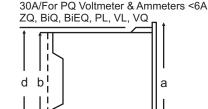

For EQ Voltmeters & Ammeters upto

For EQ Ammeters >30A/For PQ Ammeters 6- 100 A

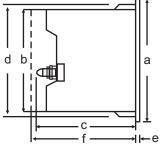

0.4kg.

	ı—— ī ——	→ ← e			←	— ī ——i i← e
Type Dimensions		48X48*	72X72	96X96	144X144	
(in mm) Bezel Case Depth	a b c* d e	48 43.5 53 44.5 5.5 45 ^{+0.6}	72 66 53 67.5 5.5 68*0.7	96 90 53 91.5 5.5 92*0.8	144 136 53 137.5 5.5 138*1	*only EQ. PQ & VQ.
Cutout size						

0.16ka 0.2ka.

0.1 kg.

Instruction Sheet

For Analogue Panel Meters type EQ, PQ, BIQ, & BIEQ, PL, VL, VQ, ZQ

1.0 General:

This meter complies with International standard IEC 1010-1 Amendment 2 for safety and is conforming to routine tests as per IEC 51. The test equipment used is traceable to National/International standards.

IC: 15030338

This product must be used after mounting in panel with hardware supplied, with wires permanently connected to terminals as specified.

2.0 Meaning of Symbols :





Caution hot surface

EU conformity mark

3.0 Safety specifications (IEC1010-1 A2)

- * Indoor use
- * Altitude up to 2000 m
- * Temp.-10 to+55° C
- * Maximum relative humidity 80% for temperature up to 31°C decreasing linearly to 50% relative humidity at 40°C & further linear decrease to 25% relative humidity at 55°C
- * Basic Insulation
- * Pollution degree2
- * Installation Categories (over voltage category): For EQ, PQ, Size 72, 96 & 144 600V CAT III Size 48 - 300V CAT III For BIQ, BIEQ, VL, VQ, ZQ PL, - 300V CAT III

4.0 Equipment Installation:

- * Due consideration should be given to space behind the meter to allow for bends in connecting cables.
- * Ensure that wires do not remain under tension.
- * The products do not have internal protection against overload & short circuit. Hence external safety protection should be provided. It is recommended to install protective device near equipment.
- * PQ meter millivolt ranges :- Please use lead wires having total resistance of 35 milliohms.
- * For IP-65 :-Meter Should be installed with IP 65 Gasket behind the bezel on the case.

5.0 Operation & Maintenance:

- * Equipment must be installed & maintained by suitably qualified person.
- * If equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
- * CTs must not be opened when on load.
- * Instruments with damaged bezels or window glasses must be disconnected from mains.
- * Back cover must be snapped into place for protection against accidental contact.
- * Disconnect supply before replacing scales, bezels or window glasses.
- * There are no user serviceable parts in this product. Please contact at the address given, for clarifications if any.

6.0 Equipment Rating:

As per information on Sticker & Dial of the instrument.

For Analogue Panel Meters type EQ, PQ, BIQ, & BIEQ, PL,VL,VQ,ZQ

1.0 General:

This meter complies with International standard IEC 1010-1 Amendment 2 for safety and is conforming to routine tests as per IEC 51. The test equipment used is traceable to National/ International standards

This product must be used after mounting in panel with hardware supplied, with wires permanently connected to terminals as specified

2.0 Meaning of Symbols:



Caution hot surface

EU conformity mark

CE 3.0 Safety specifications (IEC1010-1 A2)

>100°C

- * Indoor use
- * Altitude up to 2000 m
- * Temp.-10 to+55° C
- * Maximum relative humidity 80% for temperature up to 31°C decreasing linearly to 50% relative humidity at 40°C & further linear decrease to 25% relative humidity at 55°C
- * Basic Insulation
- * Pollution degree2
- * Installation Categories (over voltage category): For EQ, PQ, Size 72, 96 & 144 600V CAT III Size 48 - 300V CAT III For BIQ, BIEQ, VL, VQ, ZQ PL, - 300V CAT III

4.0 Equipment Installation:

- * Due consideration should be given to space behind the meter to allow for bends in connecting
- * Ensure that wires do not remain under tension.
- * The products do not have internal protection against overload & short circuit. Hence external safety protection should be provided. It is recommended to install protective device near
- * PQ meter millivolt ranges :- Please use lead wires having total resistance of 35 milliohms.

5.0 Operation & Maintenance :

- * Equipment must be installed & maintained by suitably qualified person
- * If equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired
- * CTs must not be opened when on load.
- * Instruments with damaged bezels or window glasses must be disconnected from mains.
- * Back cover must be snapped into place for protection against accidental contact
- * Disconnect supply before replacing scales, bezels or window glasses.
- * There are no user serviceable parts in this product. Please contact at the address given, for clarifications if any.

6.0 Equipment Rating:

As per information on Sticker & Dial of the instrument.

Instruction Sheet

IC: 30338

For Analogue Panel Meters type EQ, PQ, BIQ, & BIEQ, PL,VL,VQ,ZQ

1.0 General:

This meter complies with International standard IEC 1010-1 Amendment 2 for safety and is conforming to routine tests as per IEC 51. The test equipment used is traceable to National/ International standards.

This product must be used after mounting in panel with hardware supplied, with wires permanently connected to terminals as specified

2.0 Meaning of Symbols:



>100°C

Caution hot surface

EU conformity mark

3.0 Safety specifications (IEC1010-1 A2)

- * Indoor use
- * Altitude up to 2000 m
- * Temp.-10 to+55° C
- * Maximum relative humidity 80% for temperature up to 31°C decreasing linearly to 50% relative humidity at 40°C & further linear decrease to 25% relative humidity at 55°C
- * Basic Insulation
- * Installation Categories (over voltage category): For EQ, PQ, Size 72, 96 & 144 600V CAT III Size 48 - 300V CAT III For BIQ, BIEQ, VL, VQ, ZQ PL

4.0 Equipment Installation:

- * Due consideration should be given to space behind the meter to allow for bends in connecting
- * Ensure that wires do not remain under tension.
- * The products do not have internal protection against overload & short circuit. Hence external safety protection should be provided. It is recommended to install protective device near
- * PQ meter millivolt ranges :- Please use lead wires having total resistance of 35 milliohms.

5.0 Operation & Maintenance :

- * Equipment must be installed & maintained by suitably qualified person.
- * If equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired
- * CTs must not be opened when on load.
- * Instruments with damaged bezels or window glasses must be disconnected from mains.
- * Back cover must be snapped into place for protection against accidental contact.
- * Disconnect supply before replacing scales, bezels or window glasses.
- * There are no user serviceable parts in this product. Please contact at the address given, for clarifications if anv.

6.0 Equipment Rating:

As per information on Sticker & Dial of the instrument.

For Analogue Panel Meters type EQ, PQ, BIQ, & BIEQ, PL,VL,VQ,ZQ

1.0 General:

This meter complies with International standard IEC 1010-1 Amendment 2 for safety and is conforming to routine tests as per IEC 51. The test equipment used is traceable to National/ International standards

This product must be used after mounting in panel with hardware supplied, with wires permanently connected to terminals as specified

2.0 Meaning of Symbols:



>100°C

Caution hot surface

EU conformity mark

3.0 Safety specifications (IEC1010-1 A2)

- * Indoor use
- * Altitude up to 2000 m
- * Temp.-10 to+55° C
- * Maximum relative humidity 80% for temperature up to 31°C decreasing linearly to 50% relative humidity at 40°C & further linear decrease to 25% relative humidity at 55°C
- * Basic Insulation
- Pollution degree2
- * Installation Categories (over voltage category): For EQ, PQ, Size 72, 96 & 144 600V CAT III Size 48 - 300V CAT III For BIQ, BIEQ, VL, VQ, ZQ PL, - 300V CAT III

4.0 Equipment Installation:

- * Due consideration should be given to space behind the meter to allow for bends in connecting
- * Ensure that wires do not remain under tension.
- * The products do not have internal protection against overload & short circuit. Hence external safety protection should be provided. It is recommended to install protective device near
- * PQ meter millivolt ranges :- Please use lead wires having total resistance of 35 milliohms.

5.0 Operation & Maintenance :

- * Equipment must be installed & maintained by suitably qualified person.
- * If equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
- * CTs must not be opened when on load.
- * Instruments with damaged bezels or window glasses must be disconnected from mains.
- * Back cover must be snapped into place for protection against accidental contact.
- * Disconnect supply before replacing scales, bezels or window glasses.
- * There are no user serviceable parts in this product. Please contact at the address given, for clarifications if any.

6.0 Equipment Rating:

As per information on Sticker & Dial of the instrument.

Instruction Sheet

IC: 30338

For Analogue Panel Meters type EQ, PQ, BIQ, & BIEQ, PL,VL,VQ,ZQ

1.0 General:

This meter complies with International standard IEC 1010-1 Amendment 2 for safety and is conforming to routine tests as per IEC 51. The test equipment used is traceable to National/ International standards.

This product must be used after mounting in panel with hardware supplied, with wires permanently connected to terminals as specified.

2.0 Meaning of Symbols:





EU conformity mark

Caution hot surface

3.0 Safety specifications (IEC1010-1 A2)

- * Indoor use
- * Altitude up to 2000 m
- * Temp.-10 to+55° C
- * Maximum relative humidity 80% for temperature up to 31°C decreasing linearly to 50% relative humidity at 40°C & further linear decrease to 25% relative humidity at 55°C
- * Basic Insulation
- * Installation Categories (over voltage category): For EQ, PQ, Size 72, 96 & 144 600V CAT III Size 48 - 300V CAT III For BIQ, BIEQ, VL, VQ, ZQ PL

4.0 Equipment Installation:

- * Due consideration should be given to space behind the meter to allow for bends in connecting
- * Ensure that wires do not remain under tension.
- * The products do not have internal protection against overload & short circuit. Hence external safety protection should be provided. It is recommended to install protective device near
- * PQ meter millivolt ranges :- Please use lead wires having total resistance of 35 milliohms.

5.0 Operation & Maintenance:

- * Equipment must be installed & maintained by suitably qualified person.
- * If equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired
- * CTs must not be opened when on load.
- * Instruments with damaged bezels or window glasses must be disconnected from mains.
- * Back cover must be snapped into place for protection against accidental contact.
- * Disconnect supply before replacing scales, bezels or window glasses.
- * There are no user serviceable parts in this product. Please contact at the address given, for clarifications if any.

6.0 Equipment Rating : As per information on Sticker & Dial of the instrument.